
west elm


hideaway media unit

assembly instructions

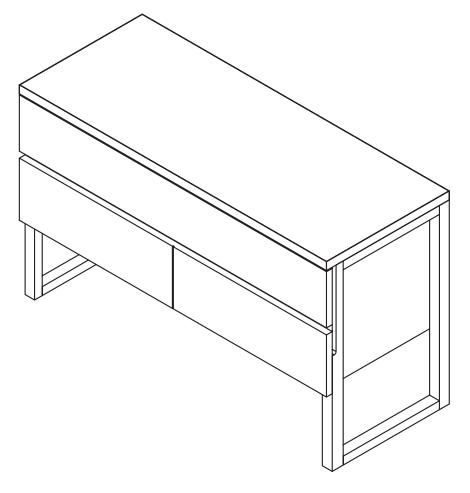

- ! Tools supplied:
- ! Do not throw away packaging materials until assembly is complete.
- ! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.
- ! Proper assembly of this item requires 2 people.

Hardware

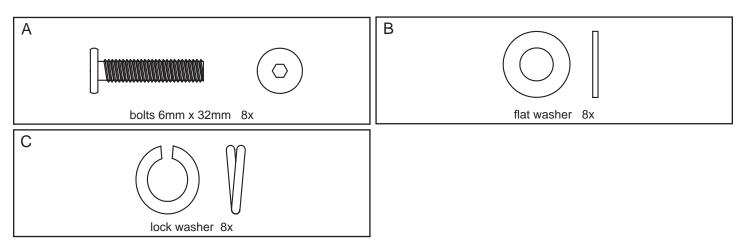


9285099/9285107 - 12/29/08

west elm

hideaway media unit

assembly instructions

1. Remove bottom drawers. Lift up/push down plastic levers on opposite sides to release drawers while pulling out. Facing the drawers, the left lever will need to be pushed up and the right lever will need to be pushed down at the same time while pulling the drawer out. (Note: when handling the levers be aware that these may be greasy)

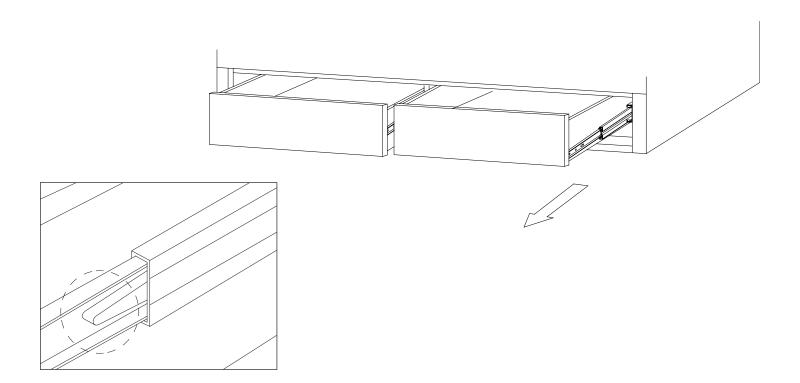


9285099/9285107 - 12/29/08 Page 2 of 4

hideaway media unit

assembly instructions

2. Align end frames to each end as shown. Insert bolt (A), lock washer (C), and flat washer (D). Tighten with supplied

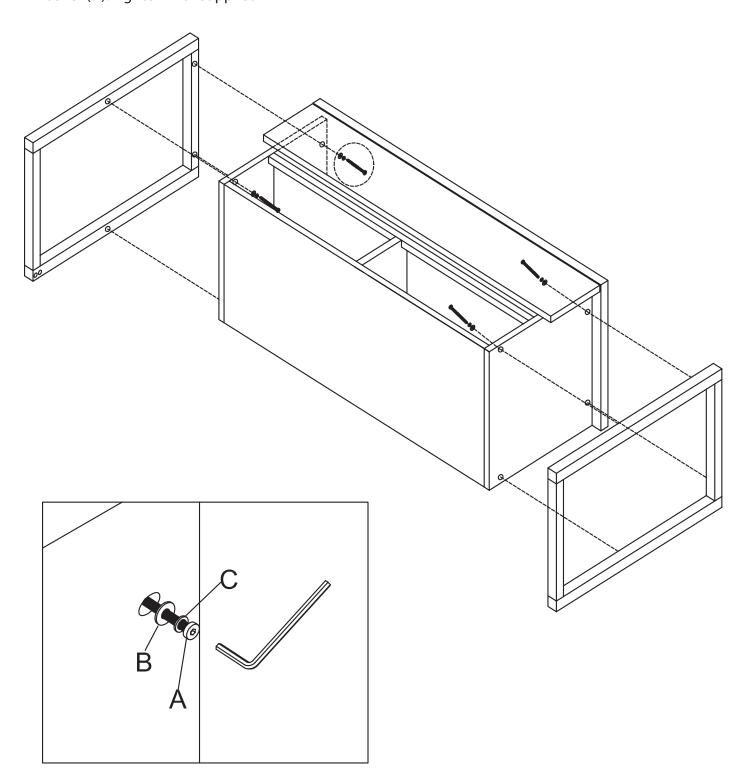


9285099/9285107 - 12/29/08 Page 3 of 4

hideaway media unit

assembly instructions

3. Replace bottom drawers making sure to align guides correctly.

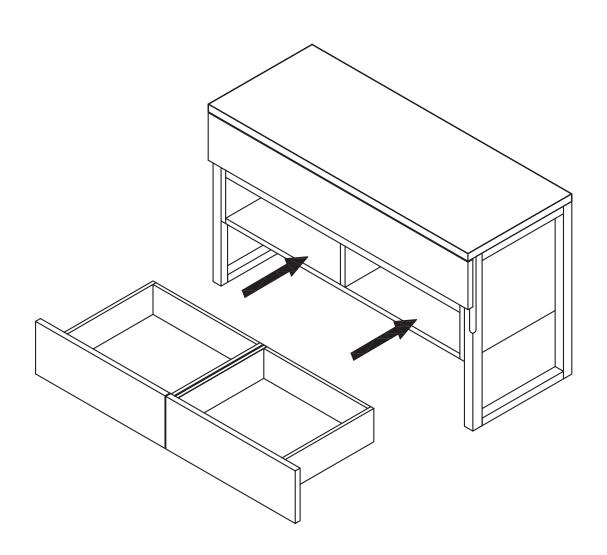

CARE INSTRUCTIONS

Hardware may loosen overtime. Periodically check that all connections are tight. Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

9285099/9285107 - 12/29/08 Page 4 of 4