

west elm

Square Column Floor Lamp

assembly instructions

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it-contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 3-way 150-watt maximum TYPE A standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts enclosed:	(1) Upper Column (G)
(1) Finial (A)	(1) Lower Column (H)
(1) Shade (B)	(1) Threaded Pole (I)
(1) Harp (C)	(1) Base (J)
(2) Harp Caps (D)	(1) Washer (K)
(1) Socket (E)	(1) Butterfly Nut (L)
(1) Saddle (F)	(1) Jointed Nut (M)

Assembly Instructions:

1. Attached the threaded pole (I) onto the jointed nut (M), and secure by turning the threaded pole clockwise.
2. Slide the lower column (H), over the threaded pole .
3. Insert the threaded pole into the center hole in the base (J) . Make sure to align the edges of lower column, upper column (G) and base.
4. Slide the washer (K) over the threaded pole. Then attach the butterfly nut (L) to the end of threaded pole, and secure by turning the butterfly nut clockwise.
5. Insert the harp (C) into the saddle (F), and lower the two harp caps (D) until they cover the two-pronged saddle.
6. Unscrew the finial (A) from the harp. Place the shade over the assembled harp.
7. Attach the finial and tighten to secure the shade.
8. Insert a bulb – Max 3-way 150 Watt (Type A) Standard (not included) into the socket (E).
9. Plug into the proper electrical outlet and test fixture.

Care instructions:

- Clean with soft, dry cloth.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.

