


## west elm

## **ASSEMBLY INSTRUCTIONS**

#### HORNE DINING TABLE

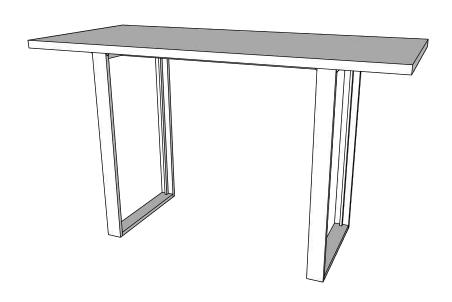

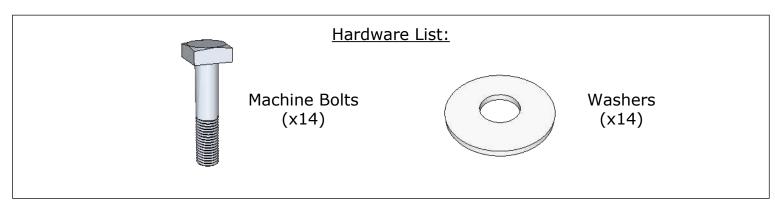

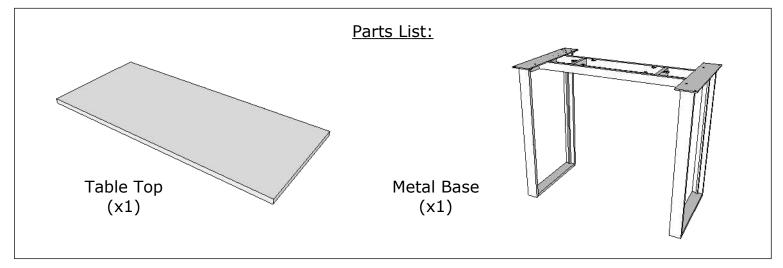


## west elm

## **ASSEMBLY INSTRUCTIONS**


#### HORNE DINING TABLE


Step 1: Remove table tops from packaging and place upside down on a non-abrasive surface.

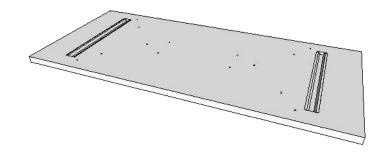

Step 2: Place Base on the table top and secure to the top with the provided machine bolts and washers.

Note: Put Machine Bolt through washer and then tighten into the table top.

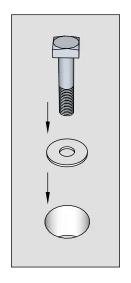

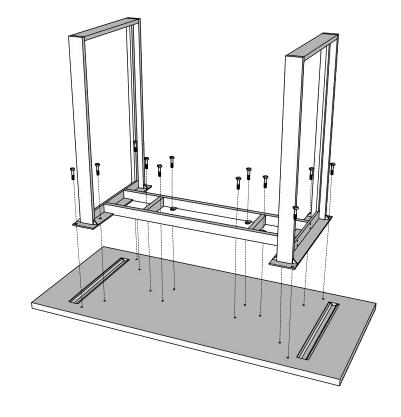


# west elm

## **ASSEMBLY INSTRUCTIONS**

#### HORNE DINING TABLE

Step 3: Tighten all Machine bolts to ensure everything stays in place when you flip the table over.

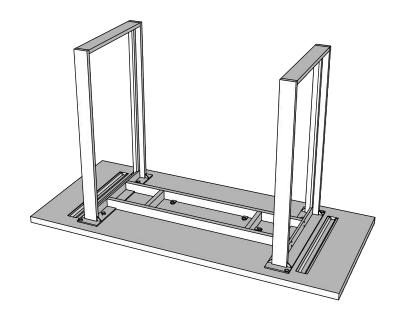

Step 4: Flip your table over and enjoy!

