

**Important Safety Instructions:**

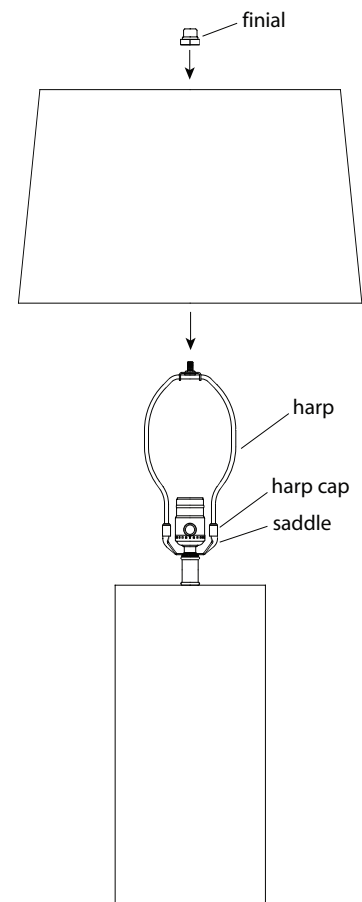
- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. Read carefully and completely before operating fixture.
- This fixture has been rated for up to (1) 100-watt maximum TYPE A standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

**Pre-assembly:**

- Remove all parts and hardware from box, or from any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding any hardware.

**To Assemble:**

1. Raise the harps caps until they are positioned above the flat ends of the harp.
2. Gently squeeze the flat ends of the harp together and position inside the base of the saddle as shown in the illustration at right.
3. With the harp in place loosen grip, allowing flat ends to rest securely in the saddles. Allow the harp caps to drop and cover the saddles.
4. Remove finial and place shade on harp. Screw on finial to secure shade.

**Care Instructions:**

- Wipe clean using a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.