west elm

flat stock triple sconce

assembly instructions

Important Safety Instructions:

These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.

•We strongly recommend that a professional electrician install all direct wire fixtures.

•This fixture has been rated for up to **3 x 40-watt TYPE B standard bulbs** (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

·To reduce the risk of fire, electrical shock or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.

Keep flammable materials away from lit bulb.

Pre-assembly:

Remove all parts and hardware from box along with any plastic protective packaging.

•Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

·For your safety and convenience, assembly by two people is recommended

Parts Enclosed:


- Mounting plate (E)
- Canopy (G)
- Socket Ring (I)
- Metal Ring (J)
- Metal Plate (L)
- Shade (H)

Hardware Included:

- (2) Mounting screws (D)
- (1) Green ground screw (B)
- (2) Plastic wire connectors (A)
- (2) Canopy Screws (F)
- (1) Wrench (K)

To install you will need:

- Electrical tape
- Screwdriver

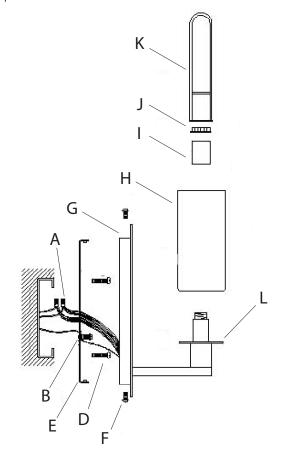

Assembly Instructions:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 2. Carefully unpack all fixture parts and hardware and lay out on a clear workspace.
- 3. Carefully inspect the fixture wires. The NEUTRAL FIXTURE WIRE is white. The HOT FIXTURE WIRE is black. The yellow-green wire or bare wire is the GROUND WIRE.

9741406- 07/07 page 1 of 2

west elm

flat stock triple sconce

assembly instructions

- 4. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet box DOES NOT have a GROUND WIRE, be sure to insert the green ground screw (B) into the mounting plate (E), and wrap the fixture's bare ground wire around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 5. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (white). Fasten each together with a plastic wire connector (A) and wrap the connection with electrical tape. Be sure no wire strands are exposed.
- 6. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (black). Fasten each together with a plastic wire connector (A) and wrap the connection with electrical tape. Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 7. Gently tuck the wire connections neatly into the junction box.
- 8. Attach the mounting plate (E) to the outlet box using the enclosed mounting screws (D). Tighten screws with a screwdriver.
- 9. Pull canopy (G) up over the mounting plate (E), align the hole in the mounting plate with the hole in the canopy. 10. Insert the canopy screw (F) and tighten with a screwdriver.
- 11. Unscrew socket ring (J) from the socket.
- 12. Place glass shade (H) on metal plate (L).
- 13. Screw metal ring (I) onto the socket.
- 14. Screw on the Socket Ring (J) and tighten with Wrench (K).
- 15. Assemble the remaining shades.

Completing the Assembly:

- 1. Insert 3 x 40-watt Type B bulbs (not included) into the socket . DO NOT EXCEED SPECIFIED WATTAGE.
- 2. Restore power to junction box and test fixture.

Care Instructions:

- Wipe clean using a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

9741406- 07/07 page 2 of 2