
# nailhead upholstered bed frame

assembly instructions

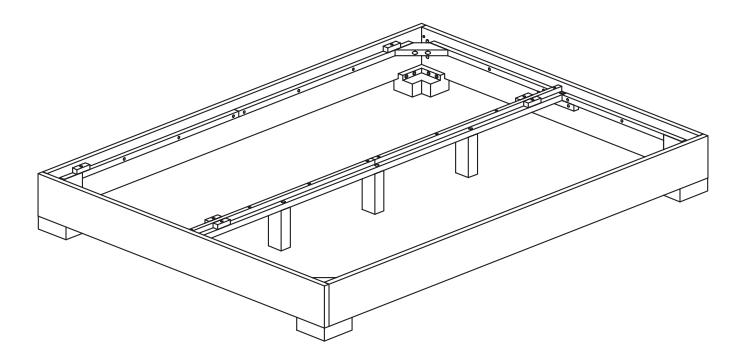

# nailhead upholstered bed frame


assembly instructions

- ! Tools required:
- ! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.


! Proper assembly of this item requires 2 people.

#### Hardware

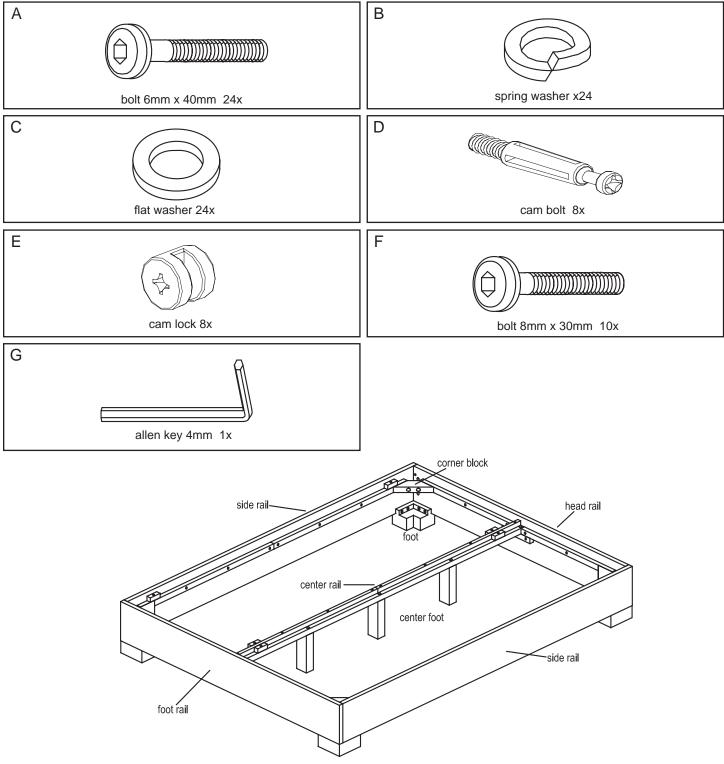


# nailhead upholstered bed frame

assembly instructions

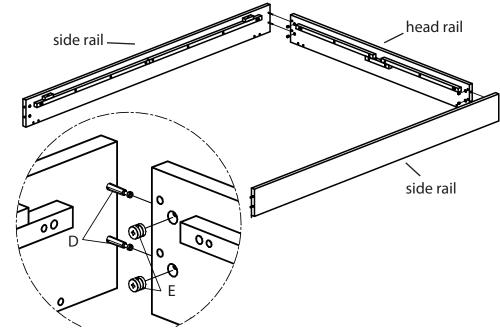

1. Screw in cam bolts (D) into holes in side rails as shown in drawing. Insert cam locks (E) into head rail as shown.


2. Screw in cam bolts (D) into holes in foot rail as shown in drawing. Insert cam locks (E) into side rails as shown. Tighten cam lock with screwdriver.

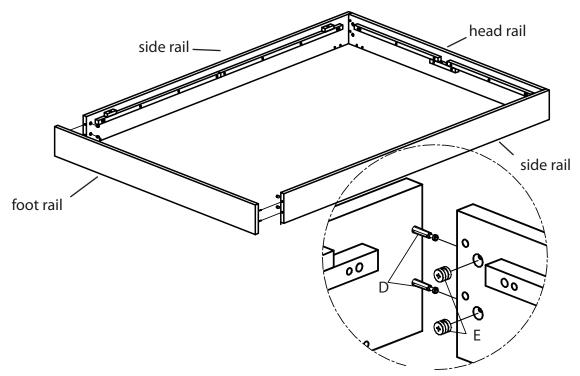


# nailhead upholstered bed frame

#### assembly instructions

- 3. Install feet in each corner. Insert 4 bolts (A) 6mm x 40mm through spring washers (B) , flat washers (C) and into top of foot. Tighten with allen key (G). Repeat on all 4 corners.
- 4. Install corner blocks in each corner. Insert 2 bolts (A) 6mm x 40mm through spring washers (B), flat washers (C) and into corner block. Tighten with allen key (G). Repeat on all 4 corners.

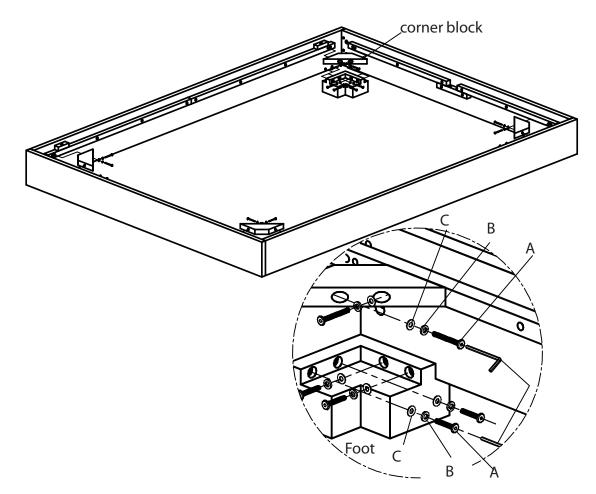


5. Align the holes in the top of the feet with the holes in the center rail. Insert bolts 8mm x 30 mm (F) and tighten with supplied allen key (G).

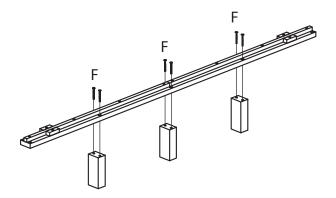


# nailhead upholstered bed frame

#### assembly instructions

6. Align center rail into the center of the head and foot rails as shown. Install 2 bolts 8mm x 30 mm (F) in each end. Tighten with the supplied allen key (G)

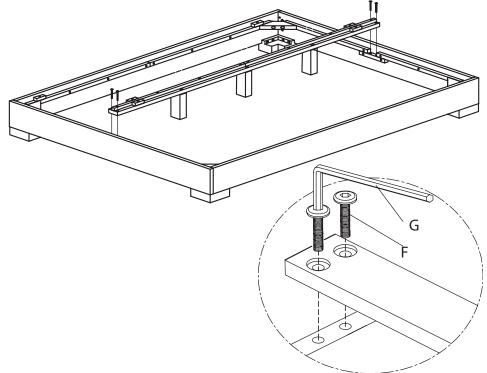

7. Lay in bed slats. (full, queen, king, cal king have 2 sets/ twin has 1 set)

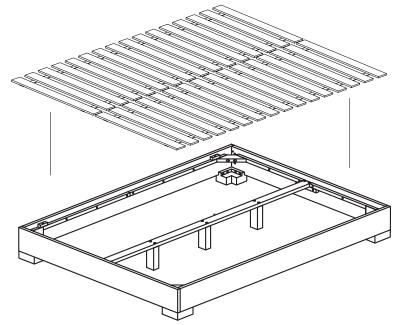

#### CARE INSTRUCTIONS

Hardware may loosen overtime. Periodically check that all connections are tight. Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners. Upholstery: Spot clean only.