
# west elm

# teak bath sink assembly instructions


- ! Professional installation required.
- ! Do not throw away packaging materials until assembly is complete.
- ! Please read all instructions carefully and completely before installation.
- ! Remove all parts and hardware from box and lay out on a clear work surface for easy identification.

## Tools required but not included for installation:





### **Product List**

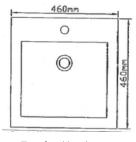

Basin (1pc)

#### To install sink basin:

- 1. Make sure sink base is level and in final position.
- 2. Install faucet and drain pipe according to manufacturers instructions.
- 3. Place sink basin on sink base and align for correct fit.
- 4. Complete water supply and drain connections.
- 5. Apply clear silicone caulk around sink basin to hold in position.

8984726-12/08 Page 1 of 1