


Mounting Type & Measurement

Measure for inside mount

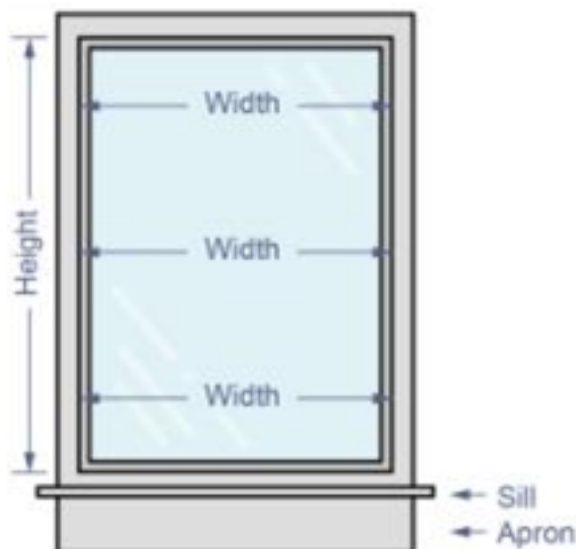


Measure the inside width of window casing at the top of the window. Top measurement is critical because the headrail must fit.

Measure the inside height from the top of window casing to top of sill in three places. Record longest measurement.

Customers will need choose a whole inch width that is at least 3/8" smaller than the window, and round down to get the correct width

Measure for outside mount

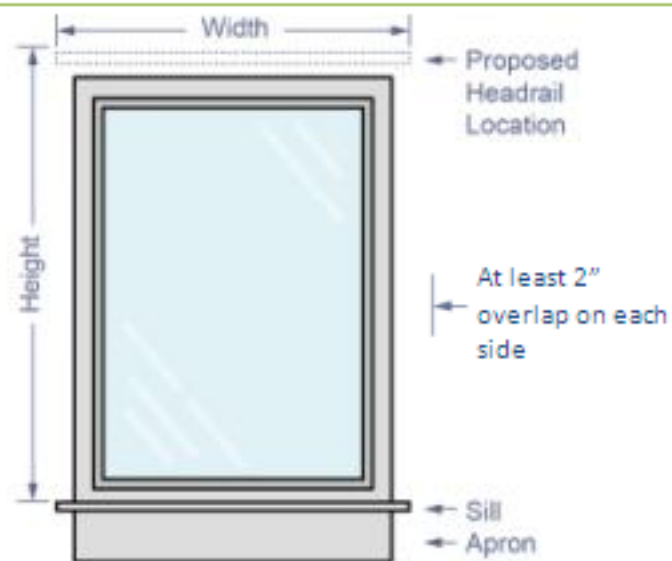

At least 2" overlap on top & bottom

Measure width to be covered. Measure height to be covered from top of roman location to top of sill or lower if overlap is desired for additional light control and privacy. Record measurement. We recommend 2" overlap on each side of the window (4" total) for optimum light control and privacy.