
# button tufted upholstered headboard

assembly instructions

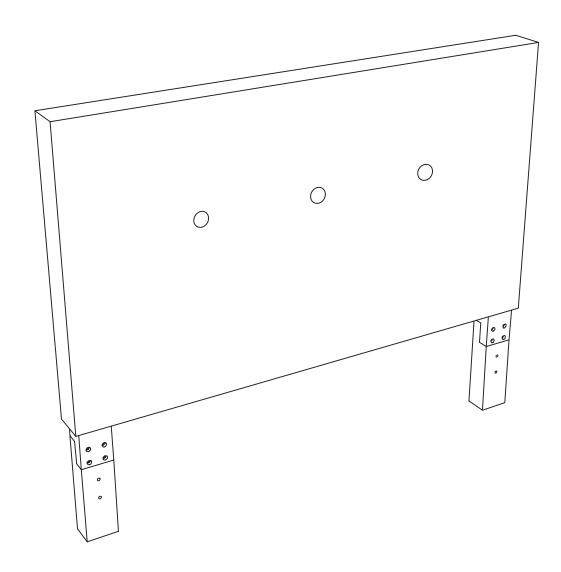


- ! Do not throw away packaging materials until assembly is complete.
- ! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.
- ! Proper assembly of this item requires 2 people.

### west elm


## button tufted upholstered headboard

assembly instructions

#### For assembly of headboard:

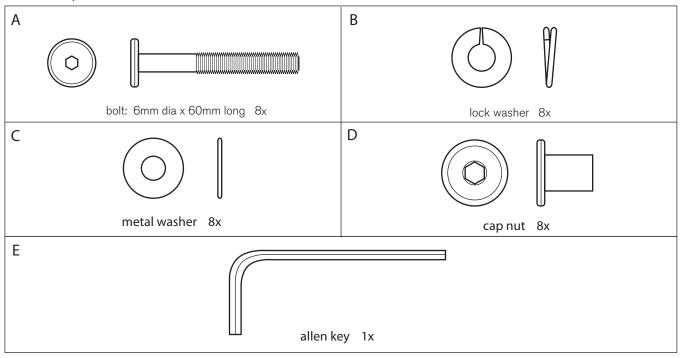

#### For attaching headboard to bedframe

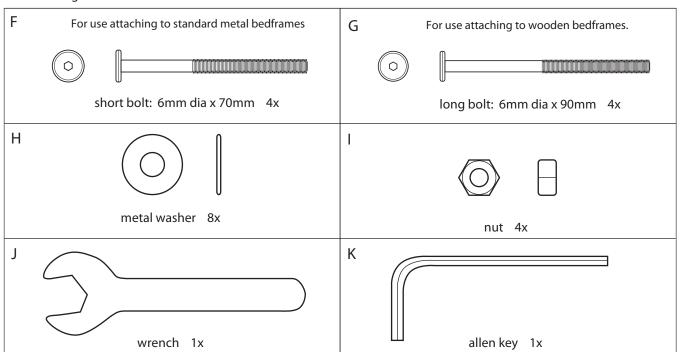


### west elm

### button tufted upholstered headboard


assembly instructions

1. Choose the legs to match your bedframe.


For bedframe with mattress on:



For bedframe with boxpring and mattress:



2. Fasten legs to headboard using screws (A), lock washers (B), flat washers (C), and nuts (D) in order as shown. Tighten screws with allen key (E).

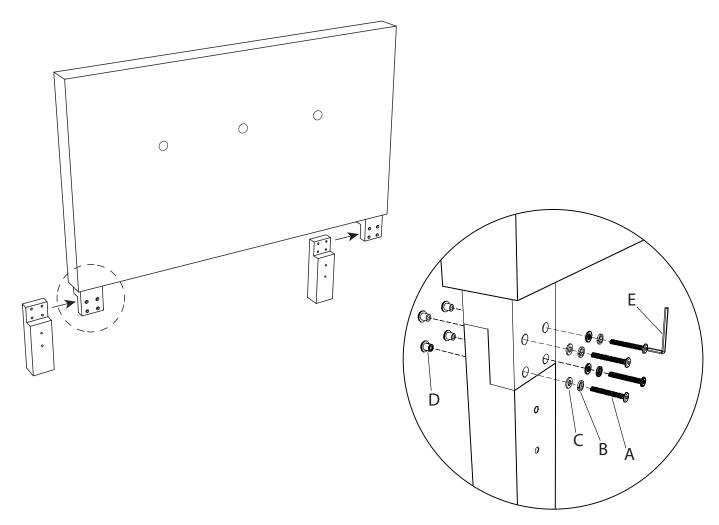


#### CARE INSTRUCTIONS

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.


assembly instructions


Attaching the headboard to wood bed frame

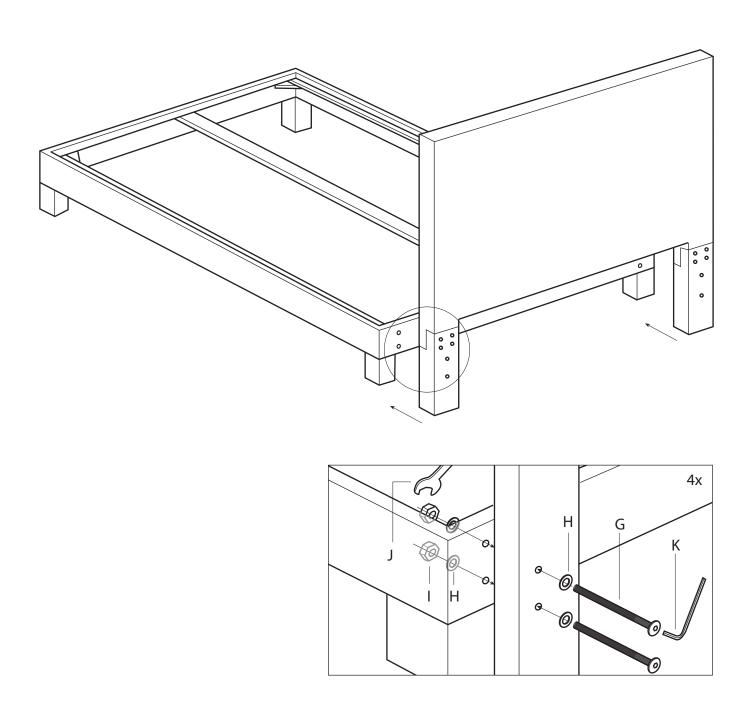


assembly instructions


Attaching the headboard to tall wood bed frame

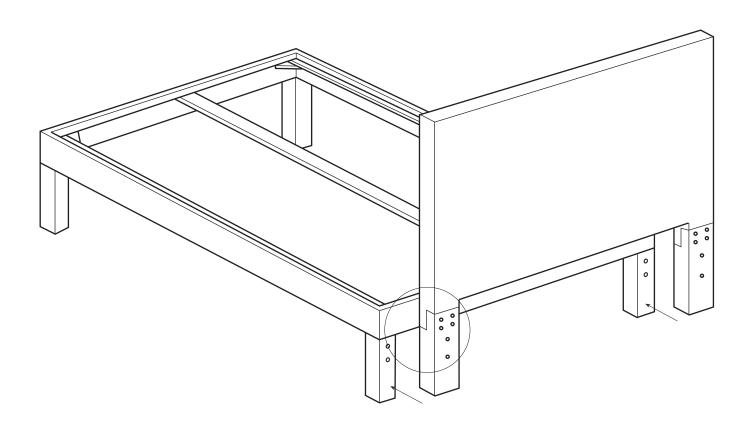

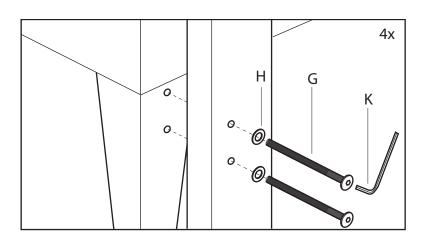

Attaching the headboard to narrow leg bed frame

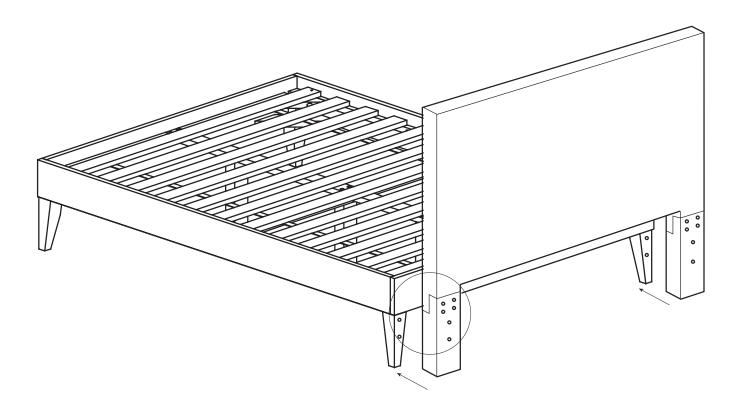

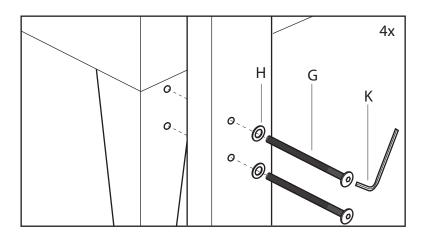

Attaching the headboard to standard metal frame

