
west elm


flat stock tieback mounting instructions


NOTE:

- Stud mounting is recommended. Use proper hardware for your wall type (such as anchors for drywall). When in doubt, consult your local hardware store.
- Wipe with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.

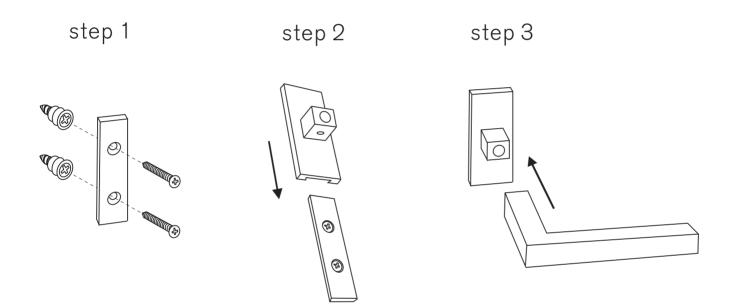

step 5.

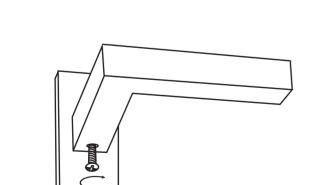

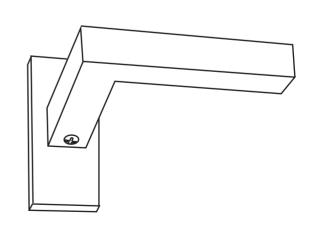

step 4.