
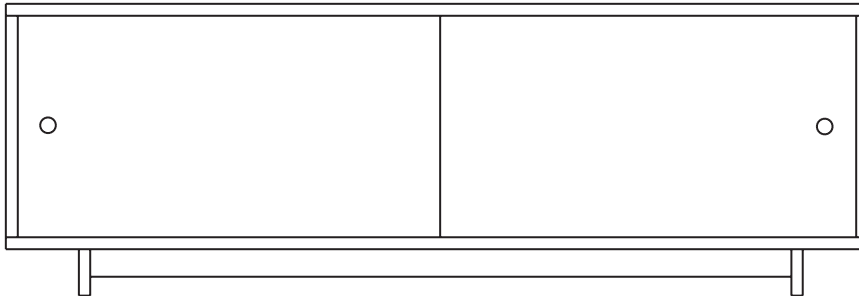


# œuf®

## PERCH FULL-SIZE CONSOLE

ITEM # 1PL-C

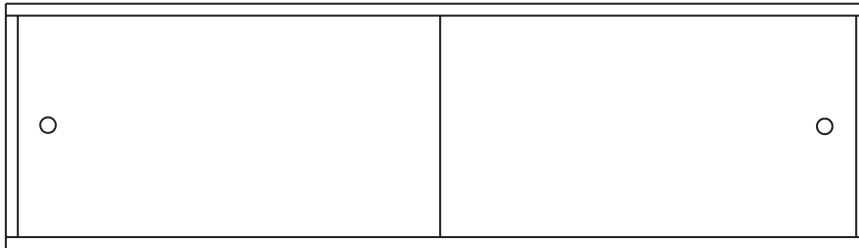

ek66209

**Oeuf LLC** 119 8th Street, Suite 301 | Brooklyn, NY 11215 | USA +1 (718) 965-1216 | [www.oeufnyc.com](http://www.oeufnyc.com)

Distributed internationally by:

*Australia*

**Kido Agencies**

Postal: PO Box 6039  
Alexandria NSW 2015  
Australia  
Tel: +61 2 9045 7799  
[info@kidoagencies.com](mailto:info@kidoagencies.com)

*EU*

**Suede Import**

20 Bis Rue des Champs  
92600 Asnières-sur-Sein  
France  
Tel: +33 (0)1 40 86 06 03  
[suedeimport@yahoo.fr](mailto:suedeimport@yahoo.fr)

*Canada*

**Monte Distribution Inc.**

270 Belfield Rd  
Toronto, Ontario M9W 1H5  
Canada  
Tel: +1 866 604 6755  
[info@oeufcanada.com](mailto:info@oeufcanada.com)

*Turkey*

**Operaistanbul**

Cengiz Topel Cad. Tugcular sok.  
No:1 Kat 3 Etiler Istanbul  
Turkey  
Tel: +90 212 321 8132  
[info@operaisatnbul.com](mailto:info@operaisatnbul.com)

*Korea*

**J2 International Inc.**

(주) 제이투인터내셔널  
서울시 강남구 도산대로 506  
재정빌딩 304호  
Tel: +82 70 8247 7576

*China*

**Arketype Limited**


7F Metro Loft, 38 Kwai Hei St.  
Kwai Chung, N.T.,  
Hong Kong  
+852 2110 9400  
[www.arketype.com](http://www.arketype.com)

*UK*

**Kids At Home Distribution**








Newick Business Centre  
Church Road  
Newick, BN8 4NA  
England  
Tel: +01825 724160





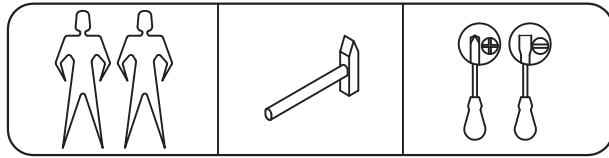


Made in Latvia





### Fittings List - Bunkbed

### Liste des Pièces


A	 Ø5/11x34	8 pcs
B	 Ø8x30	18 pcs
C	 Ø7x50	6 pcs
D	 4mm	1 pc
E	 Ø15x13,5	8 pcs
F	 Ø4x16	4 pcs
G	 Ø5x40	10 pcs


H	 3mm	1 pc
J	 Left	1 pc
K	 Right	2 pcs
L	 Right	1 pc
M	 Ø4x16	4 pcs
N	 Ø15 M6x22	4 pcs
P	 M6x80	4 pcs

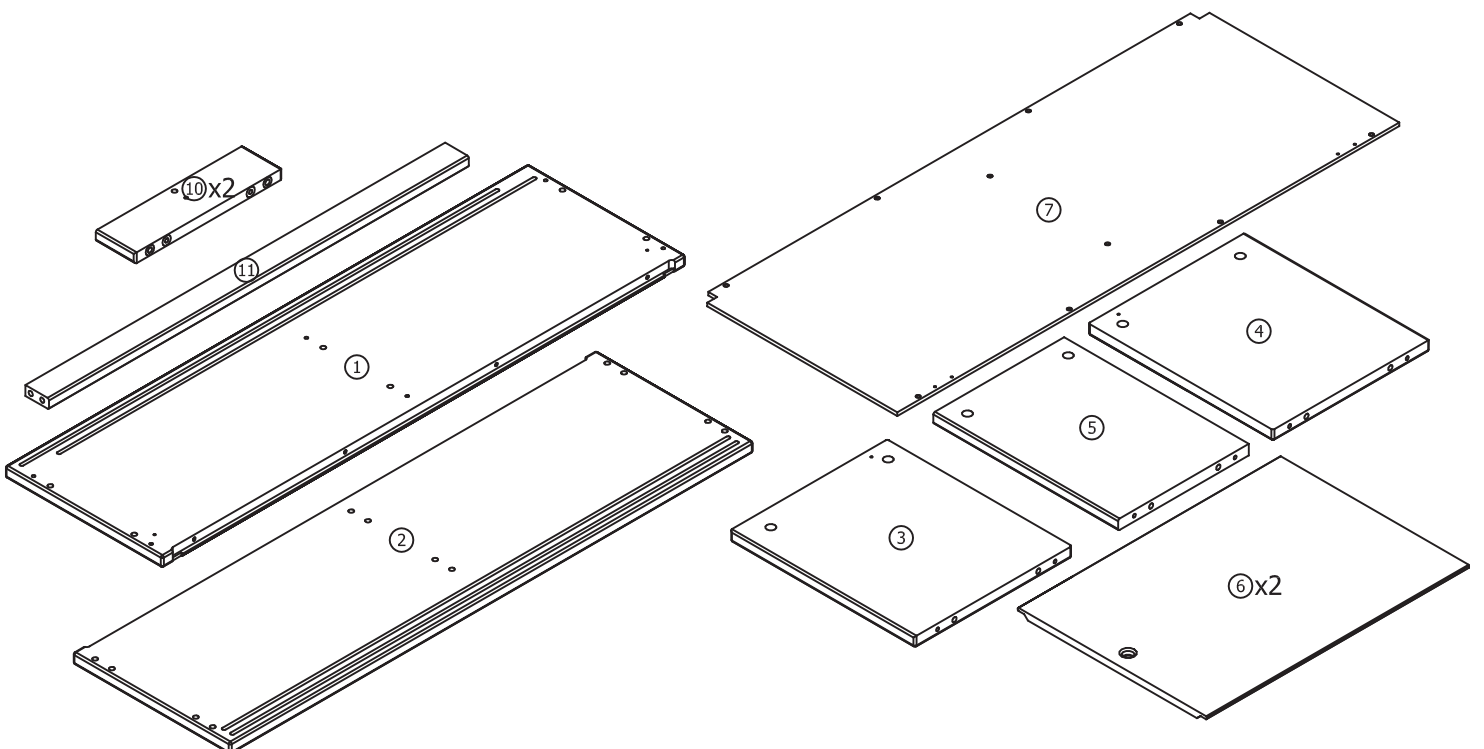


B  Ø8x30 12 pcs


1



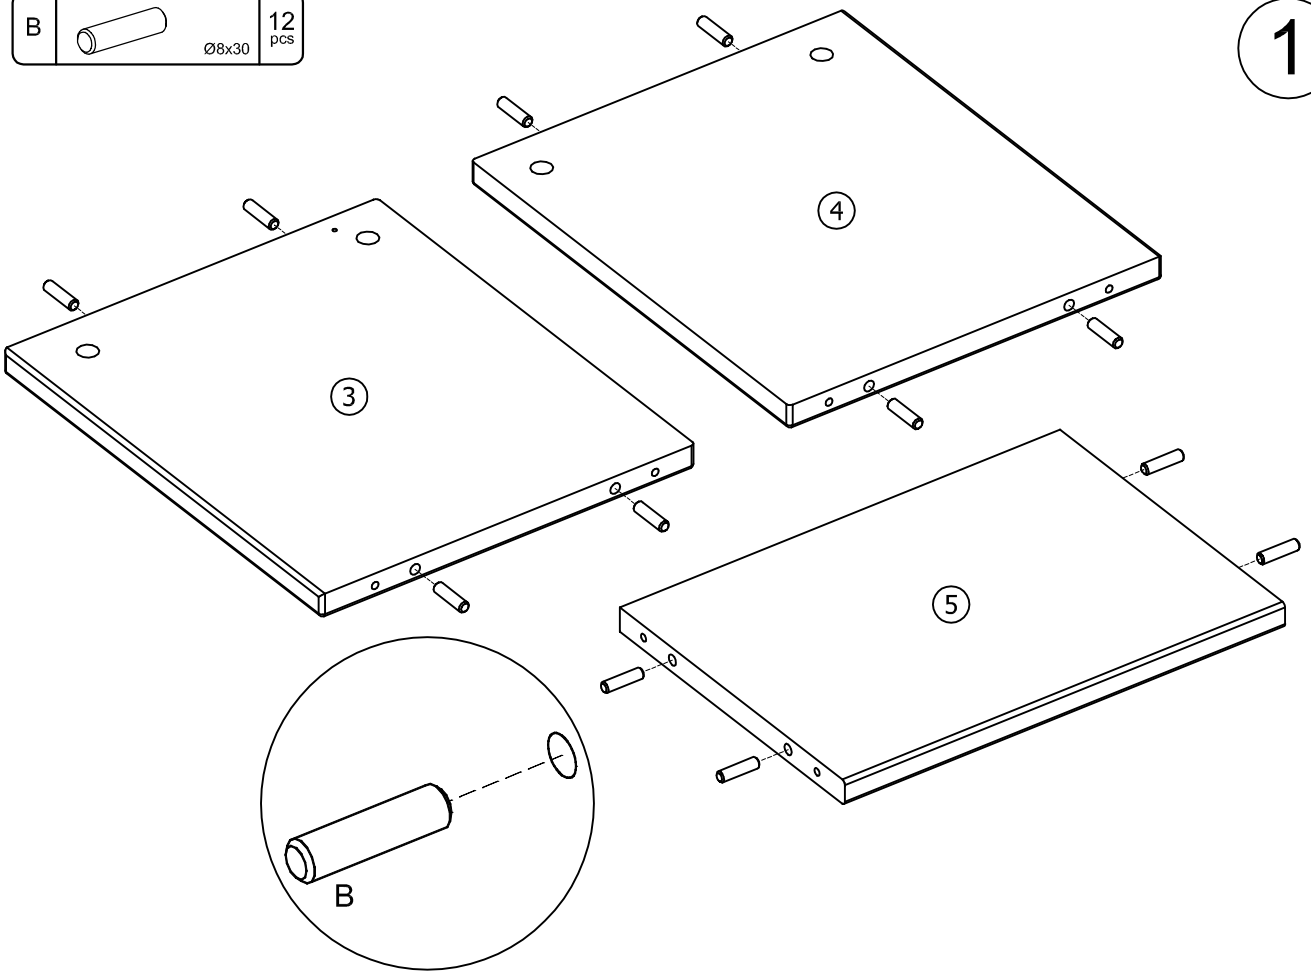


C  Ø7x50 6 pcs

D  4mm 1 pc



2

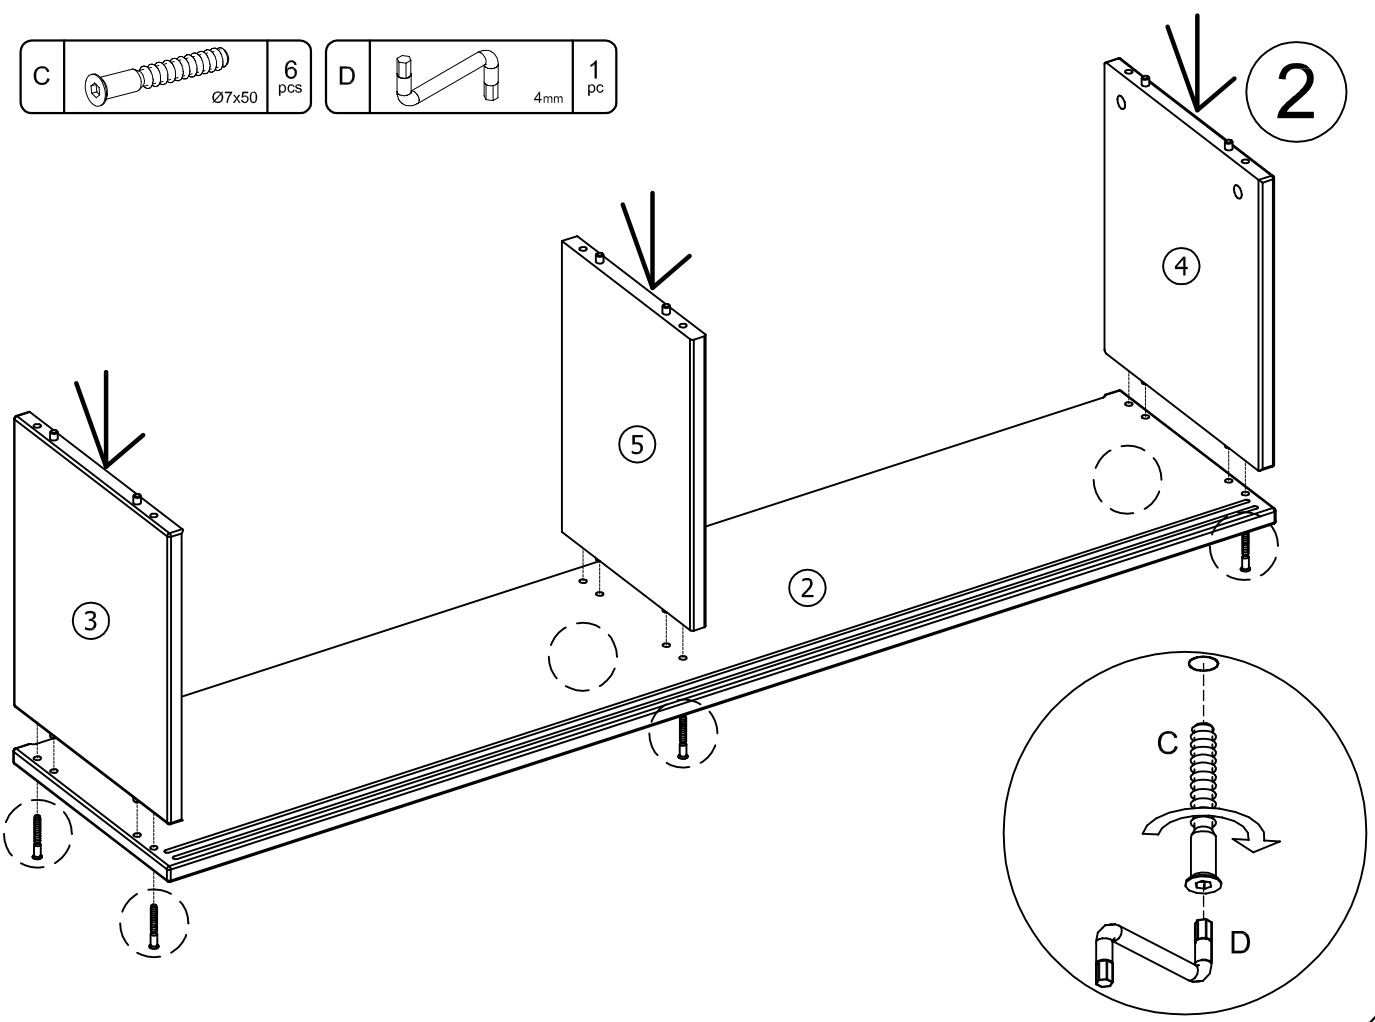




3



Do not install brackets "J" and "L" if the unit will be used on the floor as a freestanding piece.

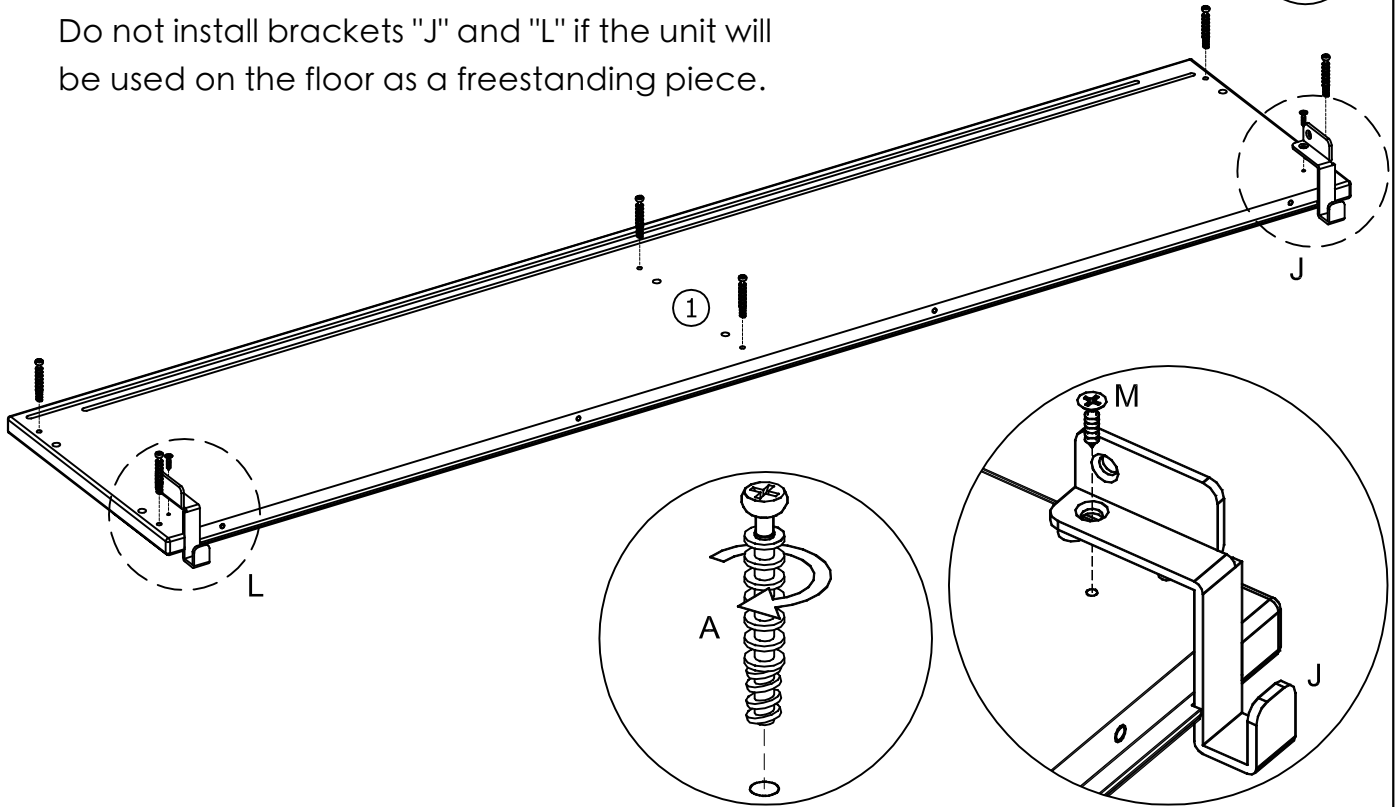


4

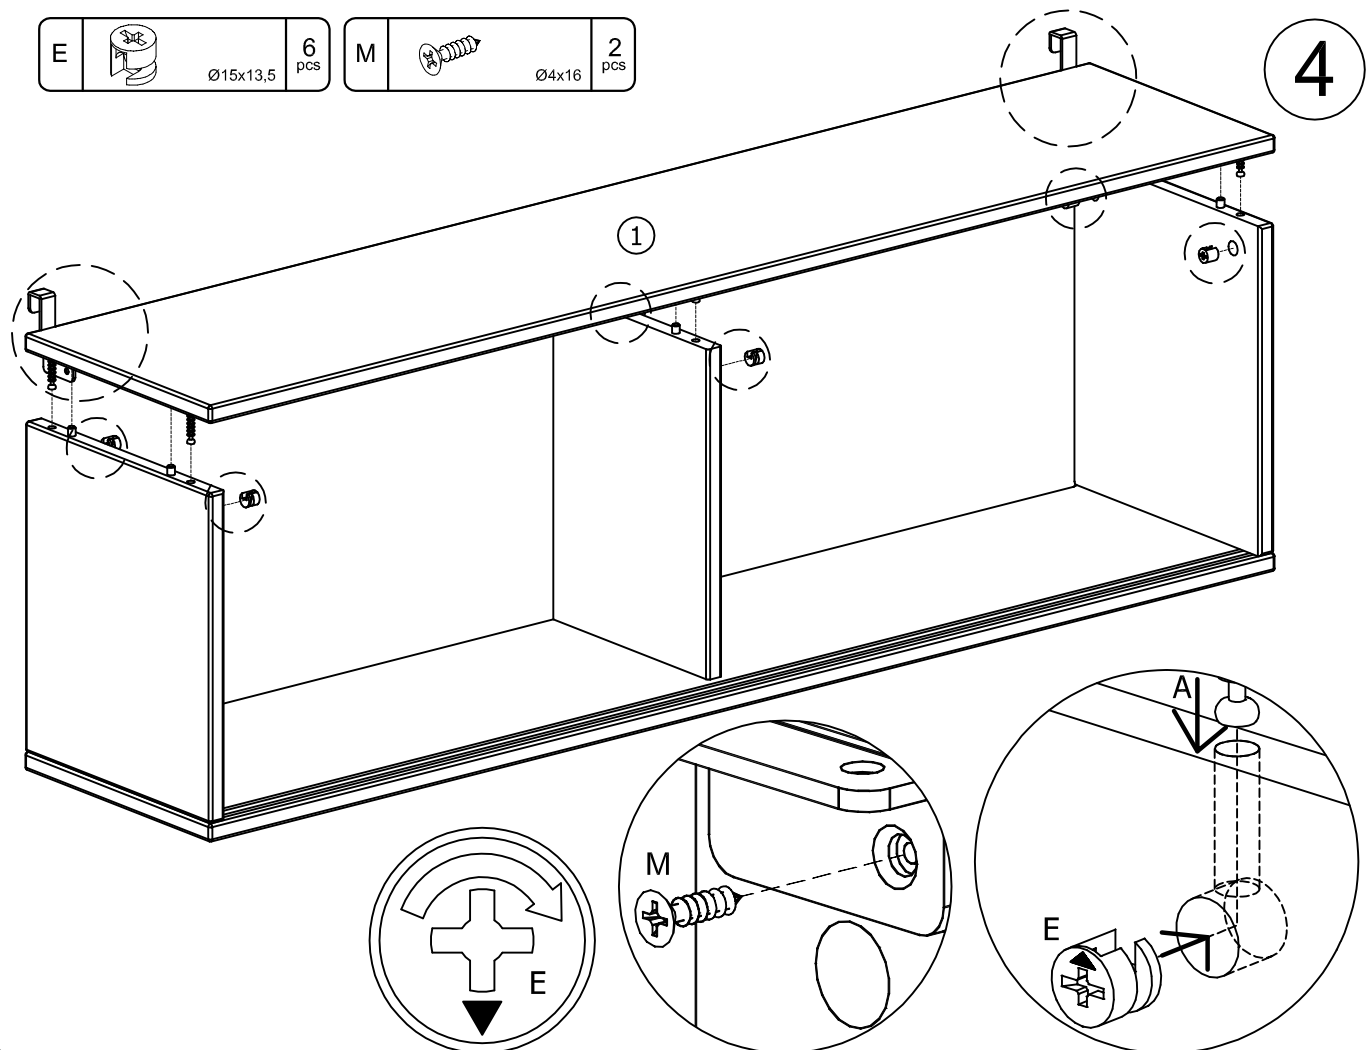



G	 Ø5x40 10 pcs	H	 3mm 1 pc
---	--	---	--

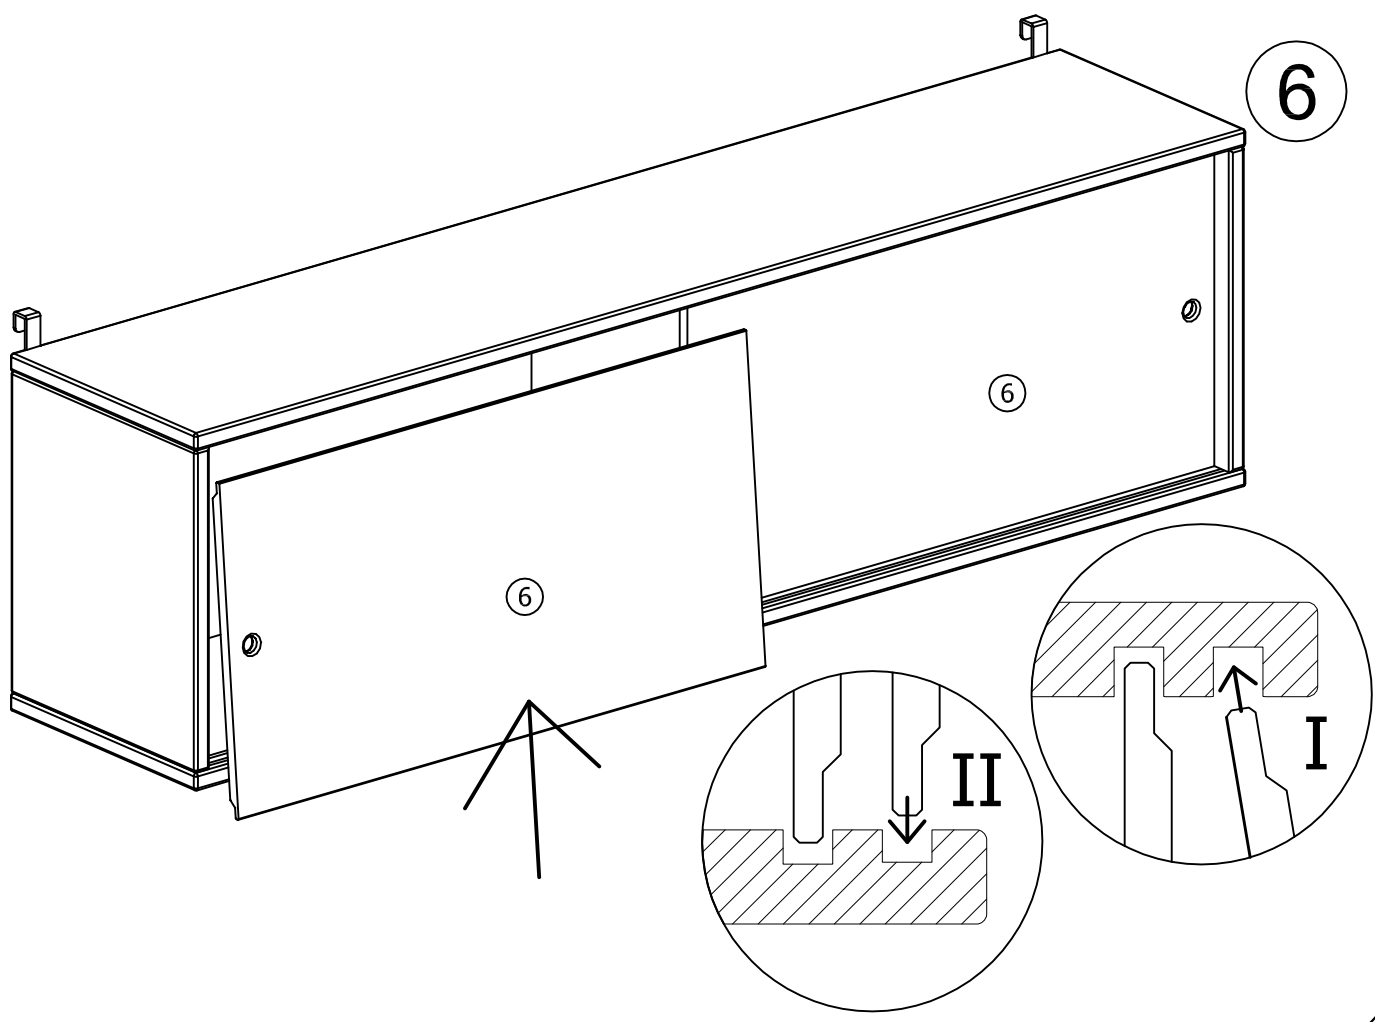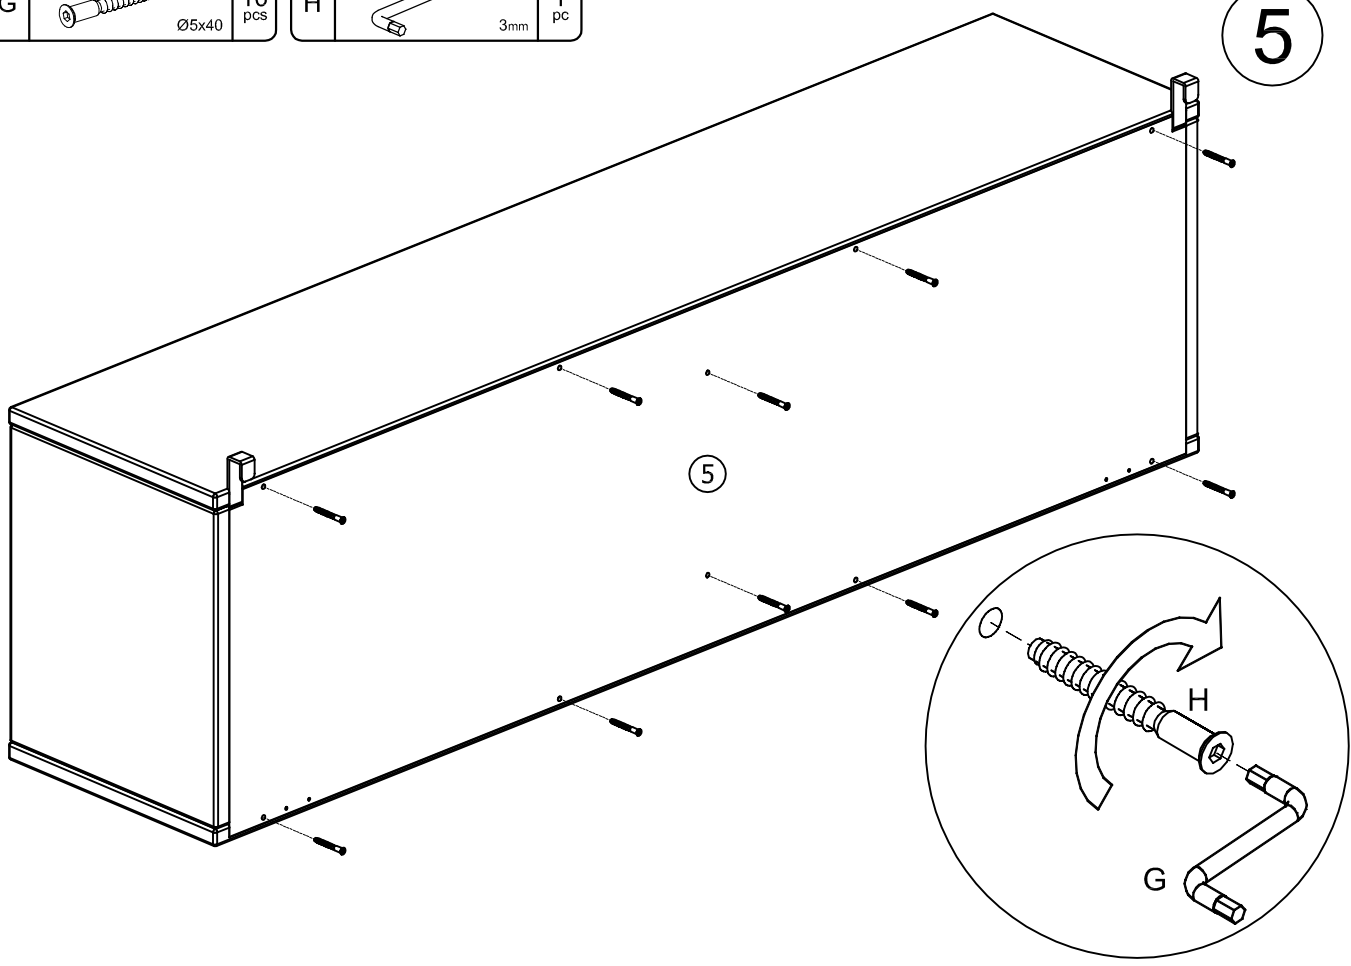

V1

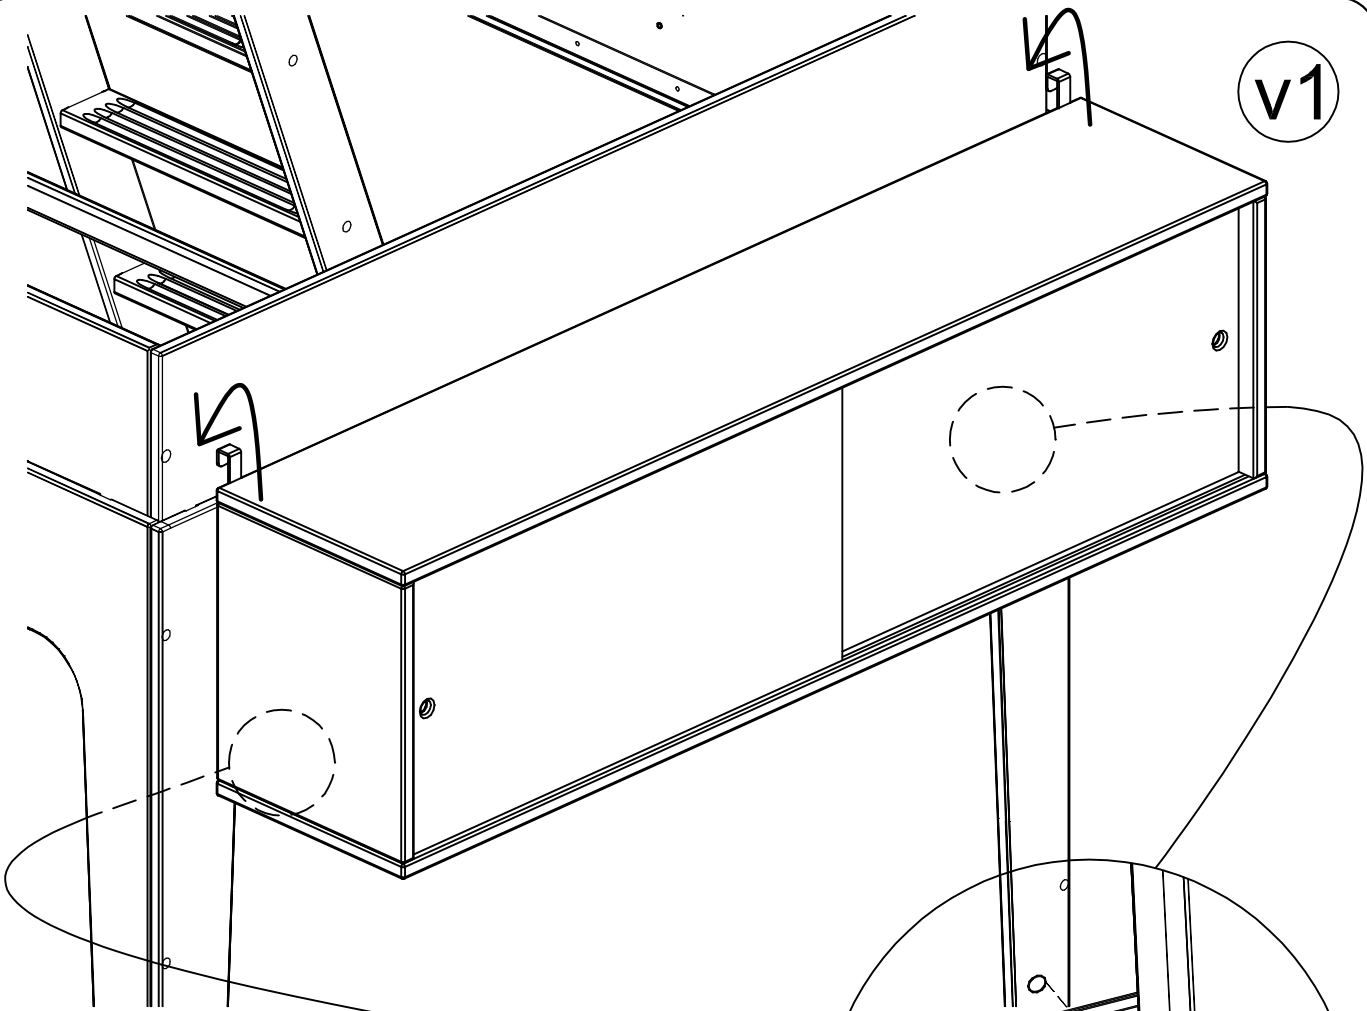

K		2 pcs	F		Ø4x16	4 pcs
---	---	----------	---	---	-------	----------

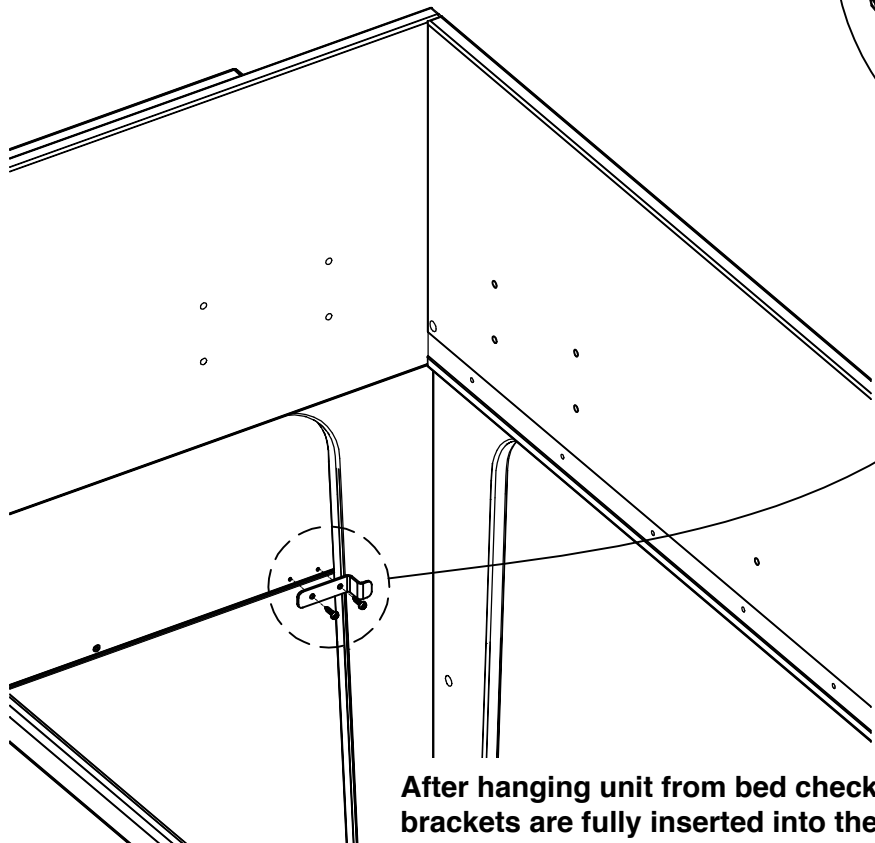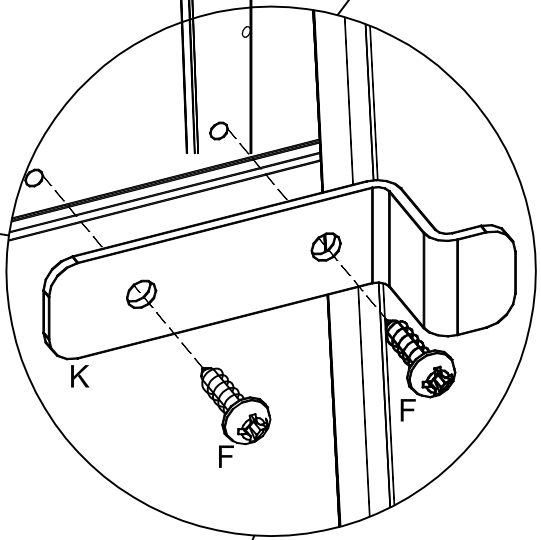

After hanging unit from bed check that the unit is secure and the brackets are fully inserted into the slots of the Perch before use.

A		2 pcs Ø5/11x34
---	---	-------------------



B		6 pcs Ø8x30
---	---	----------------


E		2 pcs Ø15x13,5
---	---	-------------------


N		4 pcs Ø15 M6x22
---	---	--------------------

v2

Do not use the base if attaching the storage unit to the Perch Loft Bed

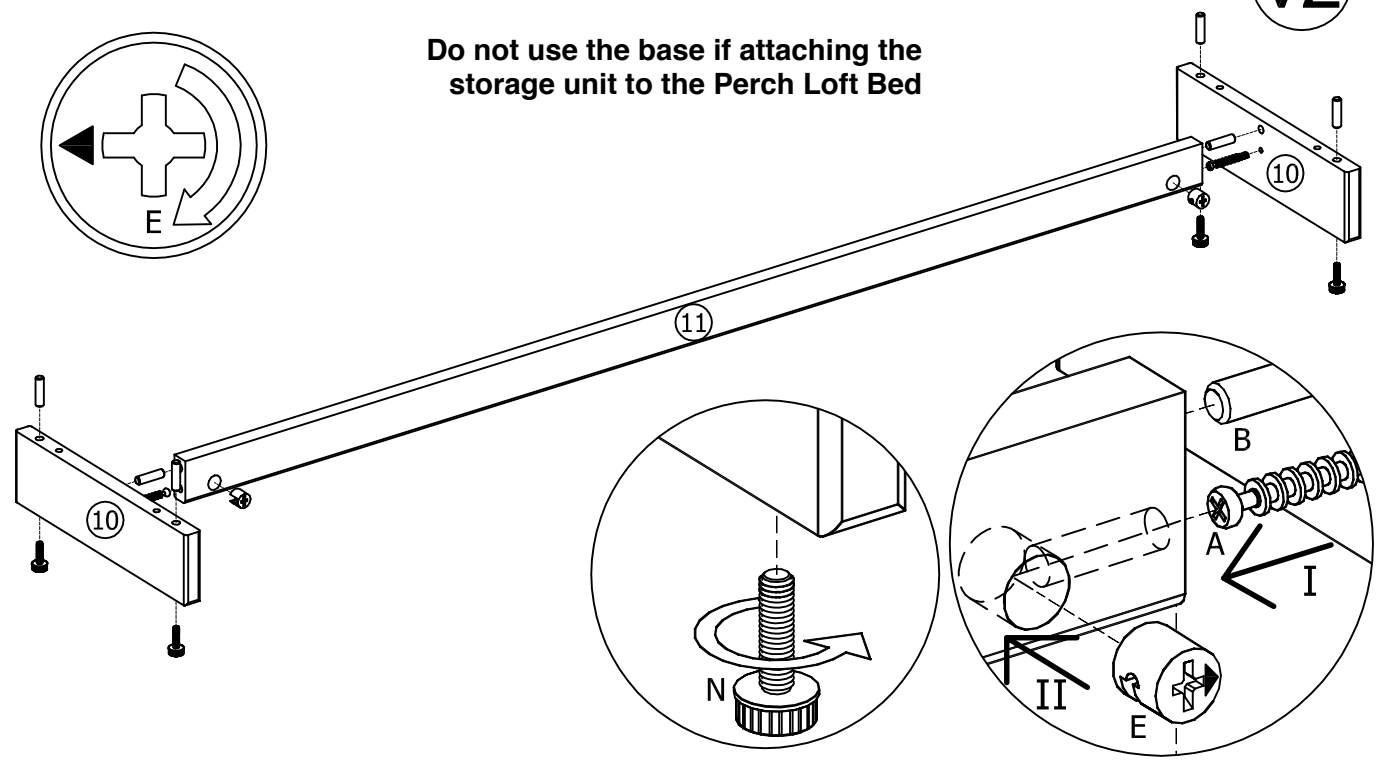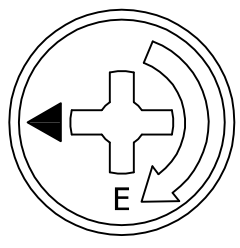

P		4 pcs M6x80
---	---	----------------

D		1 pc 4mm
---	---	-------------

