

! Tools required:



! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.


HARDWARE

A		PLASTIC ANCHOR	2 PCS
B		WALL SCREW	2 PCS
C		WASHER	2 PCS
D		SCREW	4 PCS
E		ALLEN KEY	1 PCS

** Maximum loading capacity 50lbs for each shelf.

PARTS


- ① FRAME X 1 ② CENTER ROD X 1 ③ SHELF X 14 ④ BASE SHELF X 1



- ⑤ BRACKET X 1




Step1

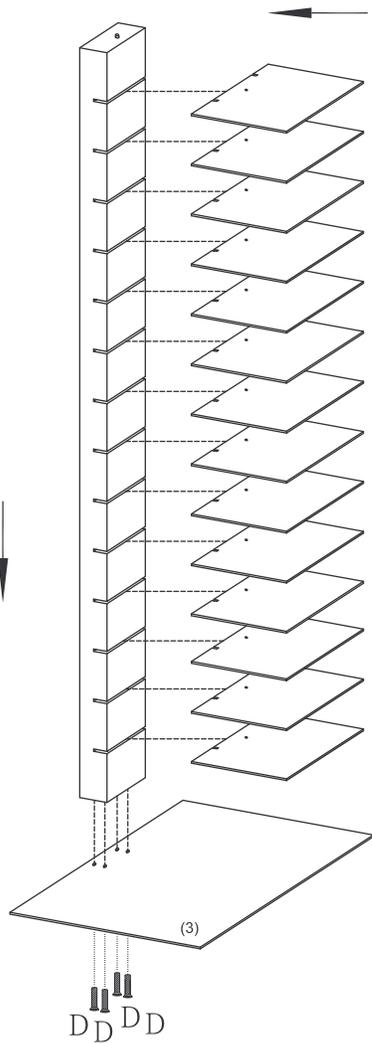


ATTACH THE FRAME(1) ON THE BASE SHELF(4)
USING SCREW(D) AND ALLEN KEY(E).
PLACE SHELVES(3) INTO THE FRAME(1).

Step2

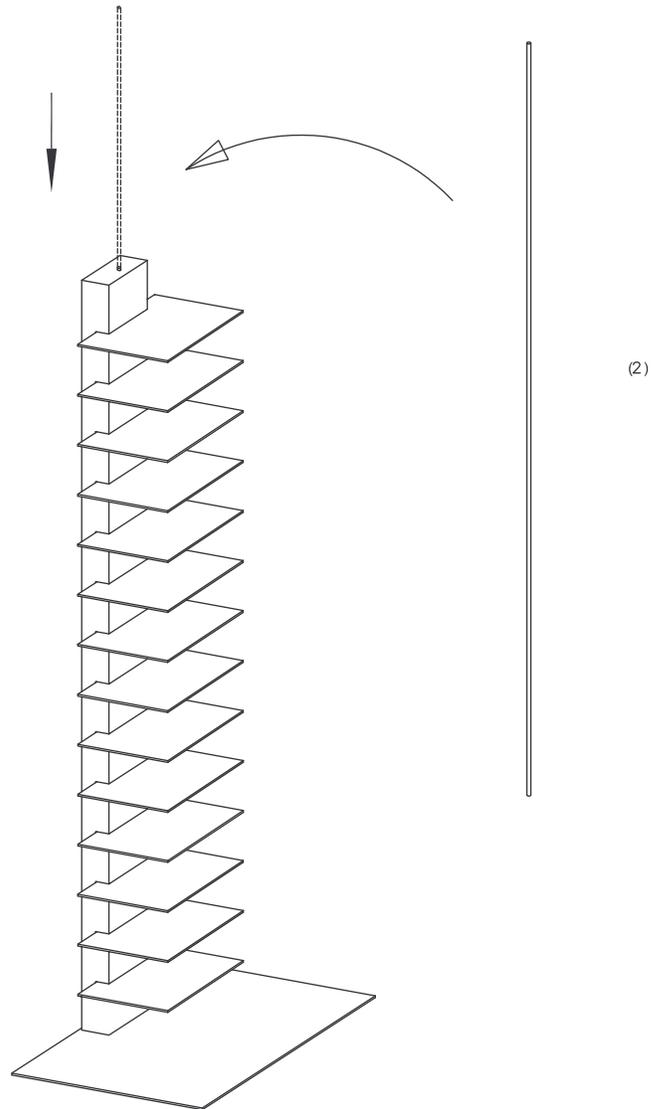

PLACE THE CENTER ROD (2)
INTO THE PRE-DRILLED HOLES
OF THE FRAME (1) AND
SHELVES(3).

Step 3

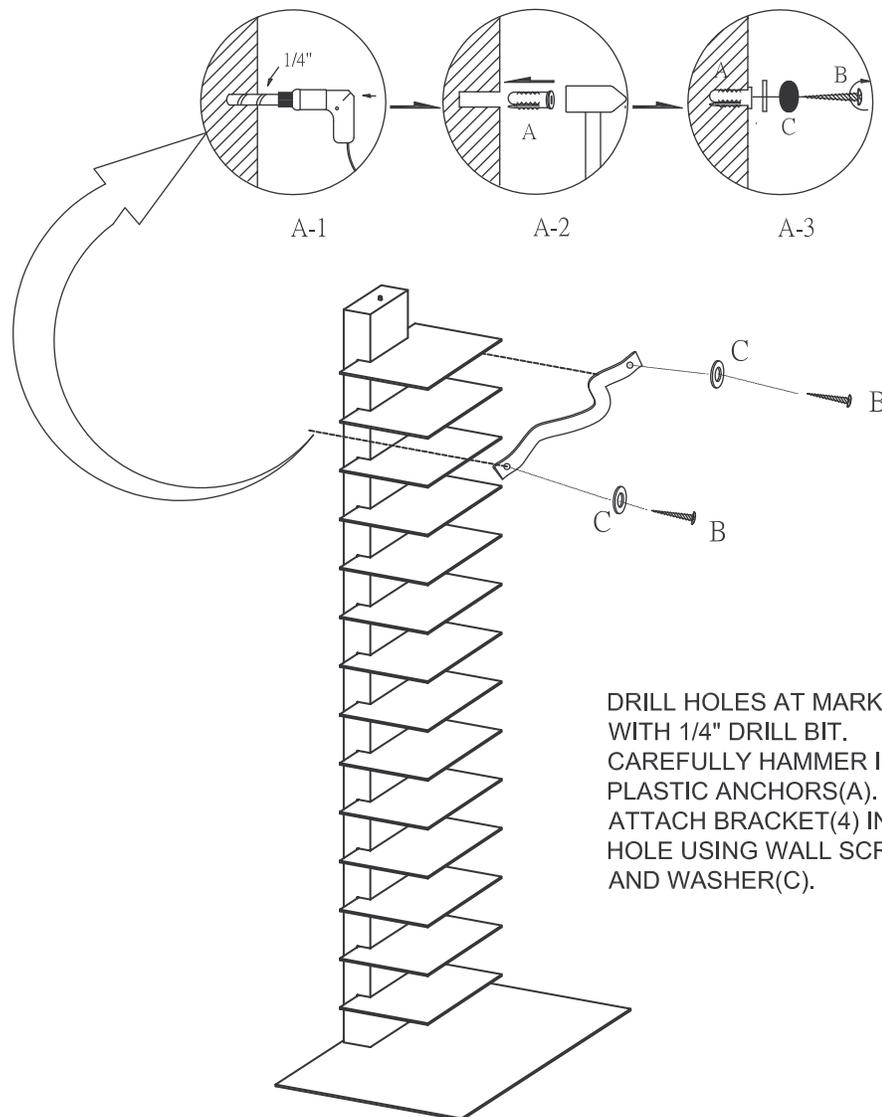

DRILL HOLES AT MARKED SPOTS WITH 1/4" DRILL BIT.
CAREFULLY HAMMER IN THE PLASTIC ANCHORS(A).
ATTACH BRACKET(4) INTO THE HOLE USING WALL SCREW(B) AND WASHER(C).

CARE INSTRUCTION

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.