


west elm

teak bath tower tall

assembly instructions

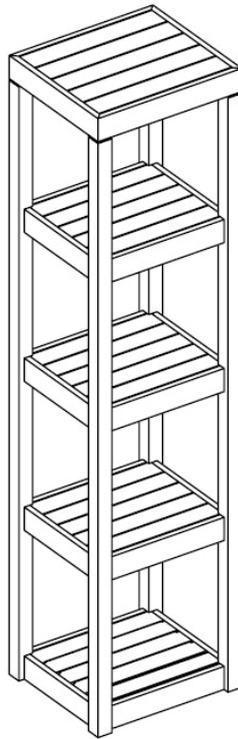

! Tools supplied:


! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.

! Proper assembly of this item requires 2 people.


## Hardware

A



bolt : 6mm x 35mm 4x


B



bolt : 6mm x 50mm 16x


## Parts

C

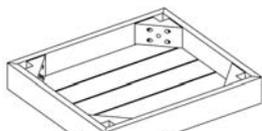


top 1x

D

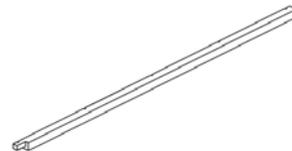


leg 4x

E

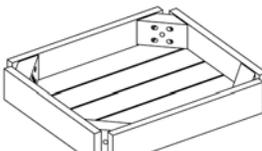

shelf 4x




Mounting Plate 2x

Anti Tip Kit




Nylon Strap 1x

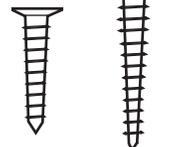


Small Screw 2x Large Screw 2x


1. Position the top (C) as shown, insert the 2 legs (D) into the opening located at each corner of the top (C). Once the leg is fully inserted, apply bolt (A) into the center hole of the top bracing as shown. Tighten fully using the enclosed allen key.

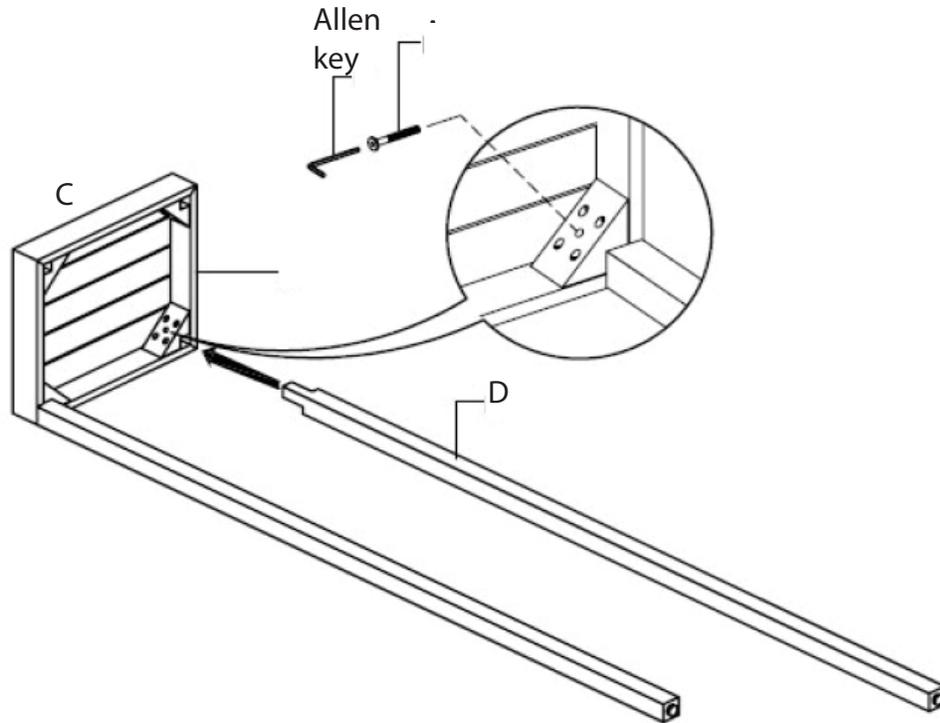

2. Insert the 4 Shelves (E) into the opening between the two previously-installed legs, align the holes from the leg with the corresponding holes on the center of the shelf bracing (located on each corner). Apply bolt (B) into the center hole of the shelf bracing as shown. Tighten fully using the enclosed Allen key.

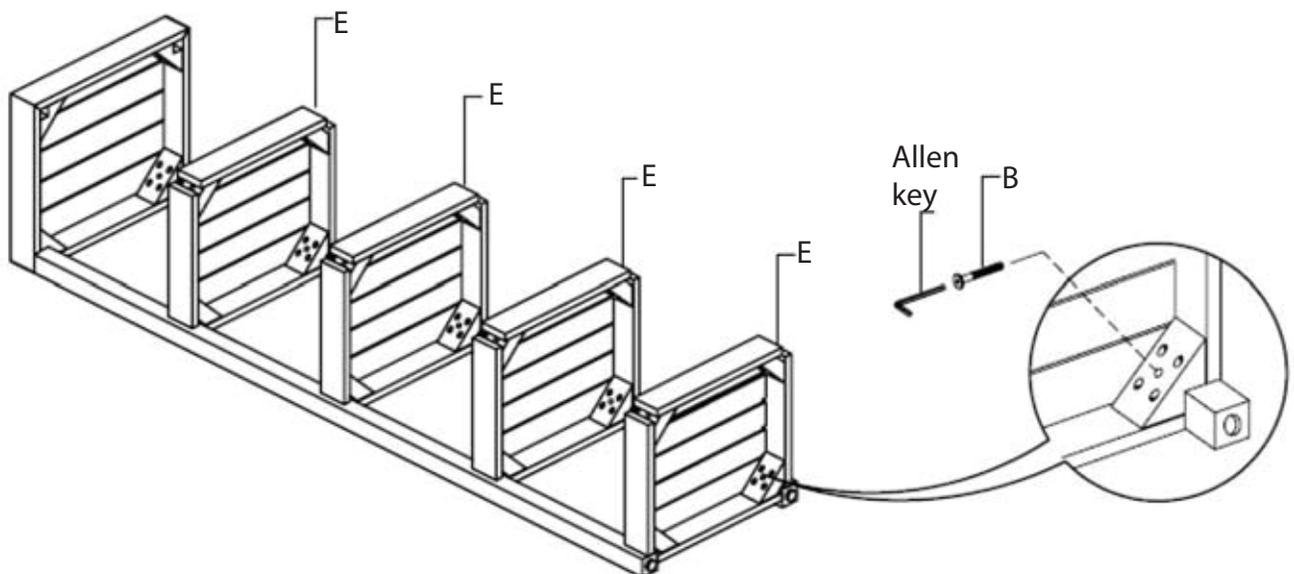

3. Insert the remaining legs (D) into the openings located at each corner of the top (C). Once the leg is fully inserted, apply bolt (A) into the center hole of the top bracing as shown. Tighten fully using the enclosed allen key. Align the holes from the leg with the corresponding holes on the center of the shelf bracing (located on each corner). Apply bolt (B) into the center hole of the shelf bracing as shown. Tighten fully using the enclosed allen key.

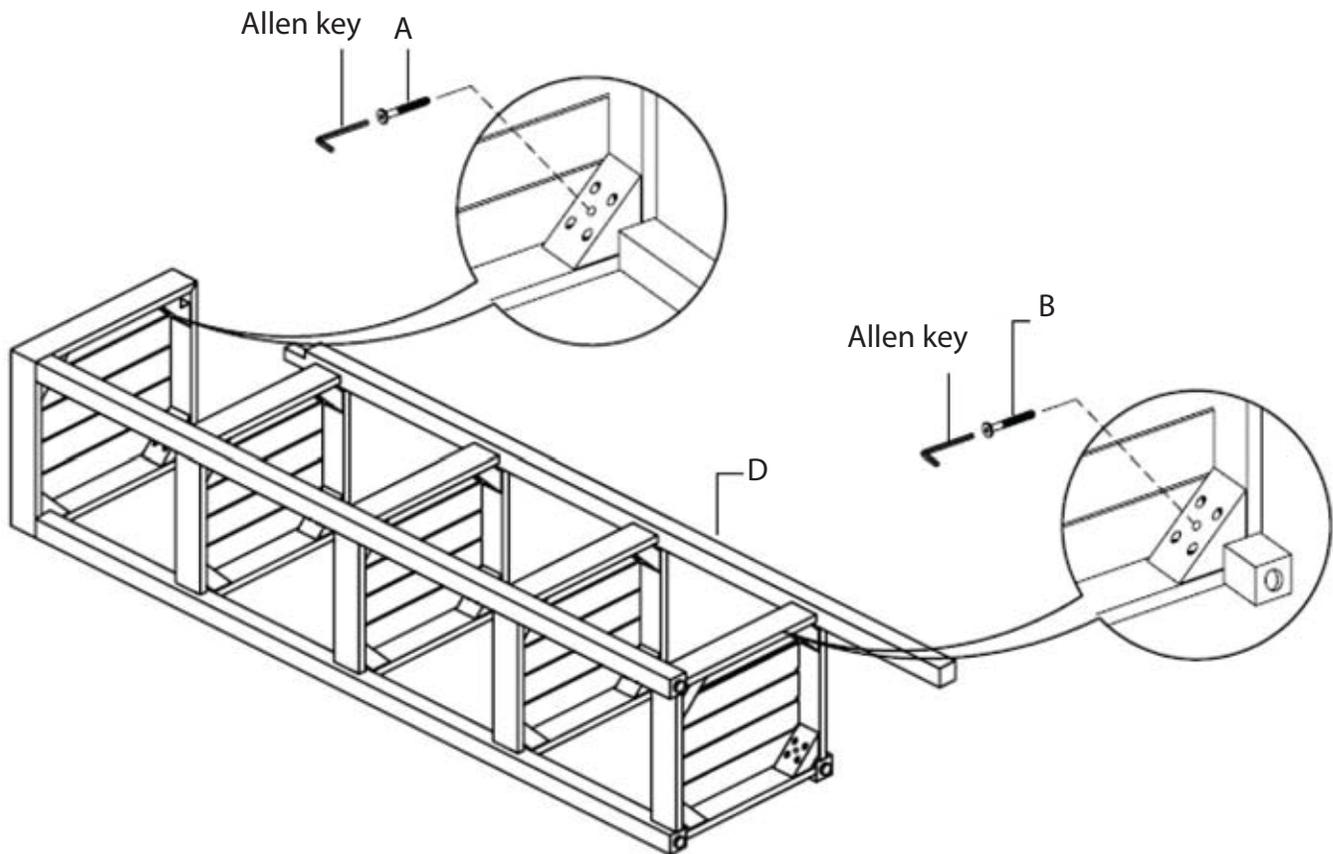


## NOTICE:

To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the anti-tip kit included with this product.

Attaching tower to wall with anti-tip kit.

1. Determine where the tower is to be placed and mark location on the wall for the mounting bracket screw holes. They should be placed approximately 2" below the top on the back of the tower.
2. Attach the mounting bracket vertically to the wall by inserting the Long screws provided through the holes in the bracket and tightening securely using screwdriver. Screws must penetrate wall studs for proper installation.
3. Next using the short screws attach the 2nd bracket to the back of the tower top frame.
4. Lace the nylon strap down through the brackets. Slide the thin end of the strap through the receiving end of the nylon strap. Pull to tighten tower snug against wall.

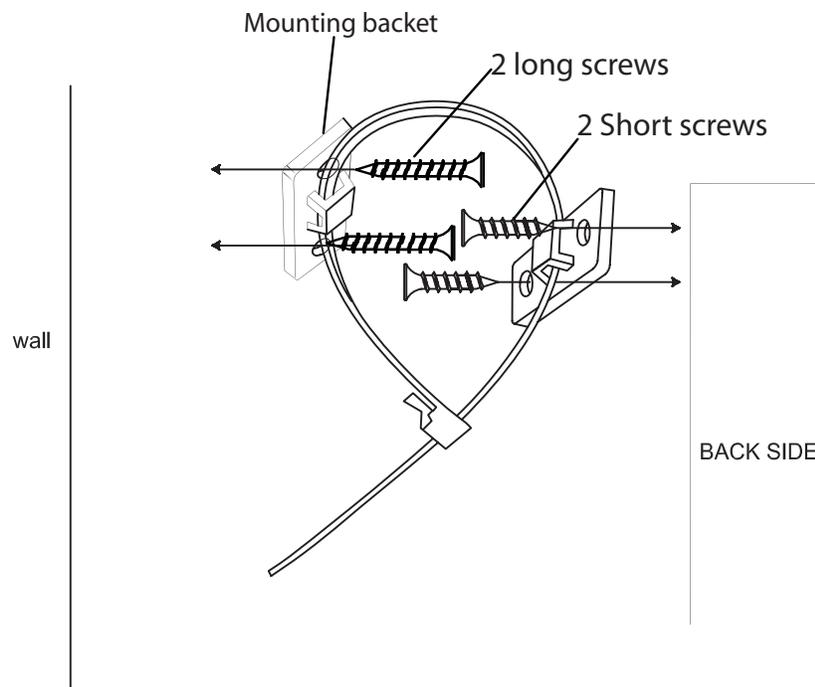

NOTE: There will be extra pieces left over from the anti-tip kit, please discard.

## CARE INSTRUCTIONS

Hardware may loosen overtime. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.